

Distributed by
Raymarine

Any reference to Raytheon or RTN in this manual should be interpreted as Raymarine. The names Raytheon and RTN are owned by the Raytheon Company.

ST3000 Wheel Pilot Quick Reference Guide

Basic operation

Auto mode

Entering Auto mode (Engaging the autopilot)

Making course changes

Returning to Standby (Disengaging the autopilot)

Returning to previous locked heading

Track mode

Entering Track mode (from Auto or Wind Vane mode)

-10 and +10 to enter Track mode

then -10 and +10 to accept new heading

Press **STANDBY** or **AUTO** to exit.

Wind Vane mode

Entering Wind Vane mode

Press **STANDBY** or **AUTO** to exit Wind Vane mode.

Using AutoTrack

Autopilot displays

Switching lighting on/off
(from Standby mode only)

Press -1 and +1 to switch between:

L1

ON

L0

OFF

Wait 10 sec to return to previous mode.

Switching AutoSeastate on/off
(from Auto/Track/Wind Vane modes)

Press -1 and +1 to switch between:

A258°

ON

A258°


OFF

D5659-1

ST3000 Wheel Pilot Quick Reference Guide

Compass calibration


1 Enter compass calibration

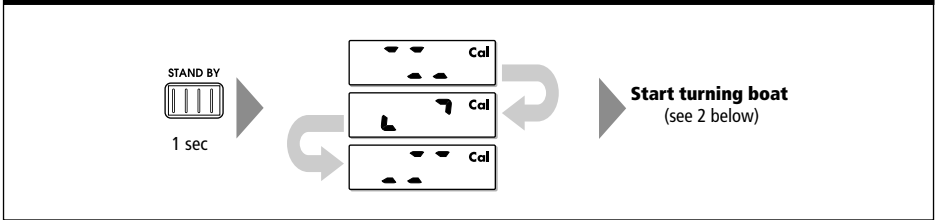

2 Turn boat in slow circles

Turn the boat in slow circles so:


- boat's speed stays below 2 knots
- each circle takes at least 3 minutes

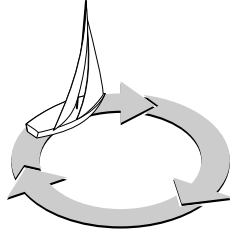

3 Autopilot displays amount of deviation detected


Keep turning the boat until the display alternates between:

 - autopilot heading
- deviation detected




4 Align the autopilot heading

Adjust the autopilot heading to match the boat's steering compass

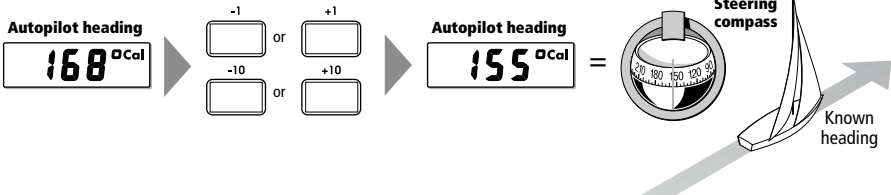

5 Save changes

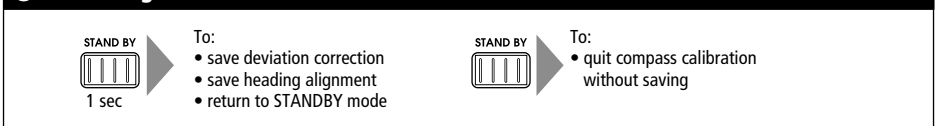

D5660-1