

INSTALLATION

3 or 4 Burner Gimballed Range (with oven or oven and broiler)

Models 60300, 60301, 60350, 60351, 60450, 60451, 61300, 61301, 61350, 61351, 61450, 61451

1. Locate the stove in an area of the countertop where there is a minimum of 30" overhead clearance. The opening between cabinets should be 22" wide, a minimum of 21" deep, and 23-1/4" high.
2. Mount a gimbal bracket on each side of the opening, positioning the bottom line of the bracket 5-3/8" below the countertop, and the front side of the bracket 6-7/8" back from the front surface of the cabinets. This will position the stove so that the top of the grill frame is flush with the countertop and the stove cabinet will be flush with the front surface of the adjacent cabinets.

(If you want the grill frame above the countertop, mount the brackets with the bottom line 4" below the countertop. If you prefer the stove be recessed from the adjacent cabinets, position the brackets deeper than 6-7/8".)

Be sure to maintain a minimum 1" open space behind the range, and at least 2" of open space below the range to permit correct gimbal action.


3. Level each bracket and fasten with 4 #12 wood screws at least 1/2" long. (Nuts and bolts with lock washers may also be used.)
4. Drill a 3/8" diameter hole on whichever side of the stove you intend to use the gimbal lock pin. Locate the hole 3/8" in from the face of the adjacent cabinet and 5-1/8" below the countertop (see diagram overleaf).
5. Open the oven. Make sure all packing materials, bands, fasteners, and anything flammable is removed. Attach the gas line to the manifold by carefully threading on the flare nut in the case of a LPG model, or by slipping the hose onto the barbed fitting as far as you can in the case of a CNG model.
6. Carefully lift the stove up and lower it into position so that the gimbal pins snap into the gimbal brackets.
7. Make sure the stove swings freely at least 15°. Check to ensure the gimbal lock pin slides into the 3/8" diameter hole you drilled into the adjacent cabinet.
8. Refer back to your manual and proceed with the gas line leak check procedure. Assuming no leaks are discovered, light each burner per the procedure given in the manual. You have now installed the finest marine galley range available.

89-01/2

619

CABO

299-


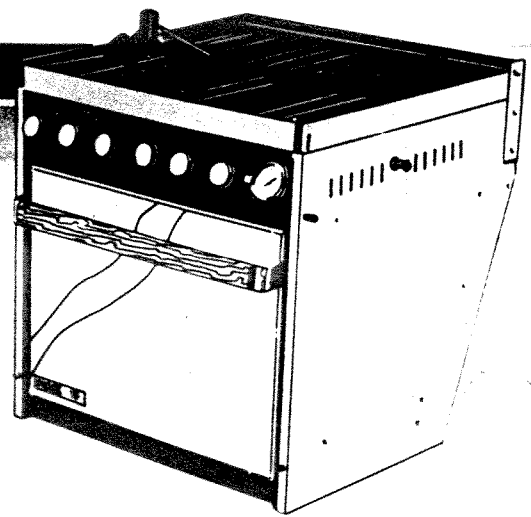


GOURMET GALLEY RANGE INSTALLATION


Model

- 60350 3-Burner Propane Range with Oven and Broiler
- 61350 " " " " " " " "
- 60351 3-Burner Natural Gas Range with Oven and Broiler
- 61351 " " " " " " " "
- 60450 4-Burner Propane Range with Oven and Broiler
- 61450 " " " " " " " "
- 60451 4-Burner Natural Gas Range with Oven and Broiler
- 61451 " " " " " " " "
- 60300 3-Burner Propane Range with Oven
- 61300 " " " " " " " "
- 60301 3-Burner Nat. Gas Range with Oven
- 61301 " " " " " " " "

These dimensions and instructions apply only to the above models.

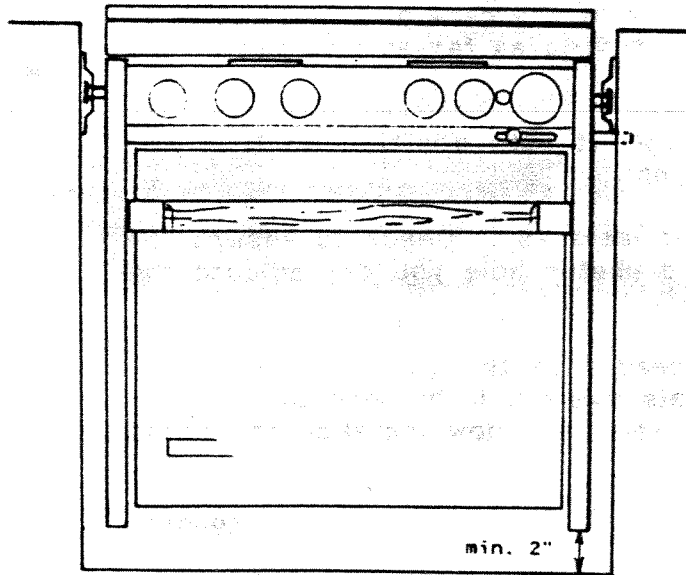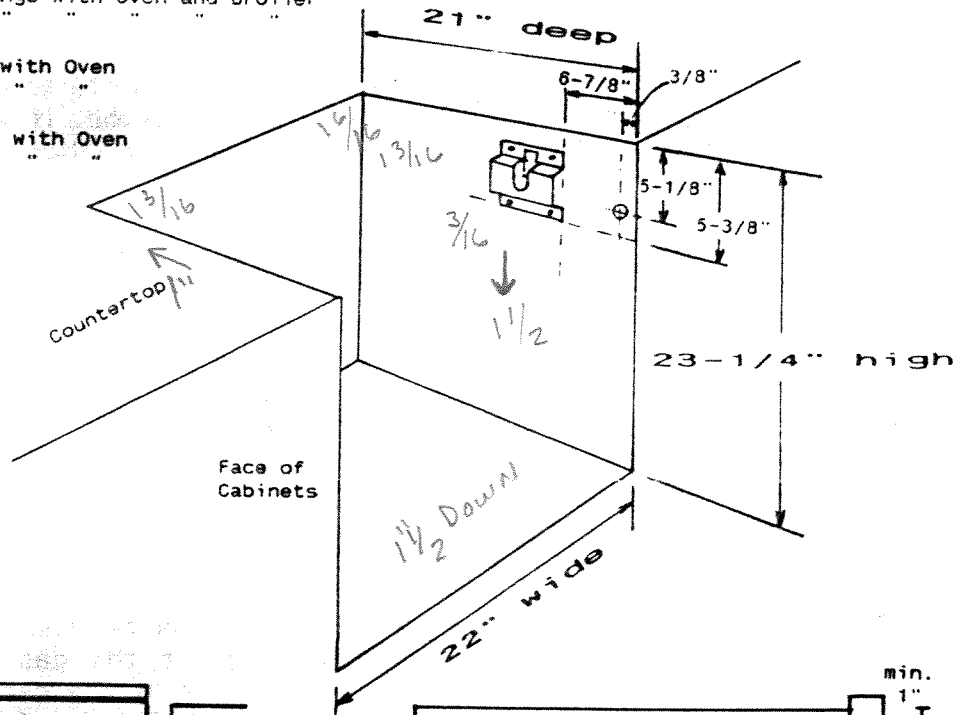

FRONT VIEW

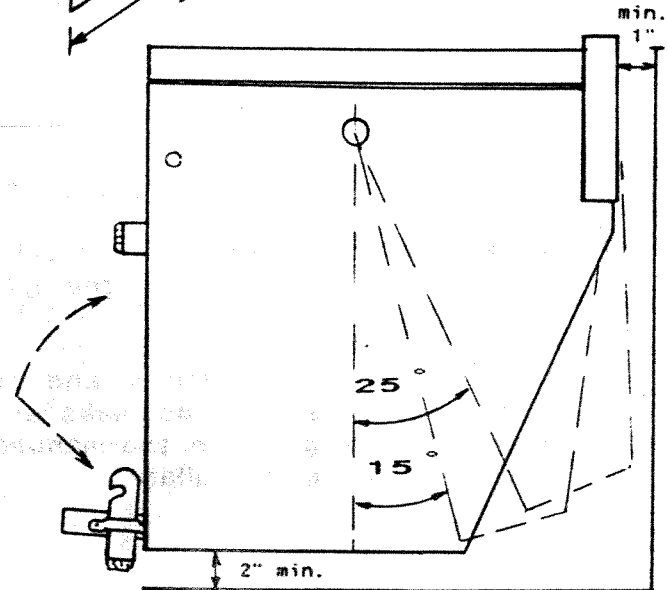

SIDE VIEW

(over)